

INSTRUCTIONS FOR CARE AND MAINTENANCE SWIVELS & SLIDES

The seat swivels and/or slides furnished by Springfield Marine Company are designed to provide years of trouble-free, maintenance-free use. Because of these designs, there are no periodic maintenance requirements, other than making sure they don't get excessively dirty.

In order to insure that your time on the water is worry-free, we do recommend the following inspections prior to each use.

1. Swivel Lock - Check to ensure that the lock handle properly engages and disengages the swivel locking pin, and that the pin operates freely and keeps the swivel from rotating when locked.
2. Slide Latch - Check to ensure that the latch handle operates freely and that the latch properly clears the swivel to allow smooth back and forth operation, and engages the swivel to prevent back and forth operation when latched.
3. Friction Control Handle - Tighten the handle completely, then back the handle off approximately $\frac{1}{2}$ turn to insure that the unit is properly adjusted.

The instructions cover the following products:

Trac-Lock III Series

Prestige Series

Elite Series

EXT Series

Camlock Series

Tru-Lock Series

Universal Series

Springlock Locking Swivel

If parts are required, they may be ordered from the boat manufacturer, or Springfield Marine Company, Nixa, Missouri, 417-725-2667

