


INSTRUCTIONS FOR ADJUSTING POWER RISE PEDESTAL UNITS

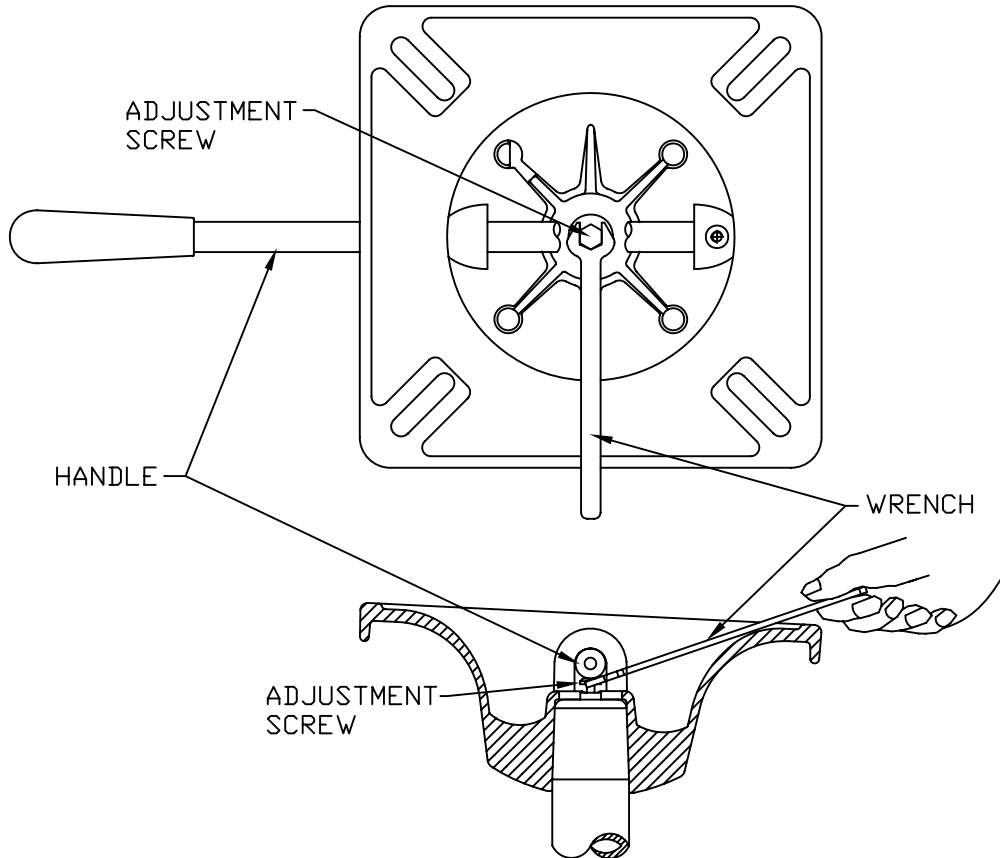

* If the unit comes up by itself, adjust screw clockwise $\frac{1}{2}$ turn using a $\frac{5}{16}$ " open end wrench. Apply pressure to the top of the unit to see if it will go down without activating the handle. If the unit still comes back up without activating the handle, adjust screw another $\frac{1}{2}$ " turn clockwise. Continue this process until the unit will hold weight without the handle being activated.

* If the unit will not raise or lower when the handle is activated, turn the screw $\frac{1}{2}$ turn counter-clockwise. If the unit will still not raise or lower while the handle is activated, turn the screw another $\frac{1}{2}$ turn counter-clockwise. Continue this process until the unit will raise and lower properly.

