

INSTRUCTIONS FOR CARE & MAINTENANCE

PRESTIGE LOCKING HANDLE

1. Locate supplied locking handle shown in Figure 1 and the lock pin actuator shown in Figure 2.
2. Place the locking handle onto the lock pin actuator as shown in Figure 3.
3. Push locking handle onto lock pin actuator until it “clicks” into place as shown in Figure 4. Once the lock handle is installed it will not be removable without damaging the lock pin actuator.

