

CARE & MAINTENANCE OF SEAT PEDESTALS

The seat pedestals furnished by Springfield Marine Company are designed to provide years of trouble-free, maintenance-free use. Because of these designs, there are no periodic maintenance requirements, other than making sure they don't get excessively dirty.

In order to insure that your time on the water is worry-free, we do recommend the following inspections prior to each use. Non-adjustable (fixed height) pedestals do not require these inspections.

MANUAL ADJUSTABLE

1. Lock Handle - Check to ensure that the handle properly engages and disengages the locking pin, and that the pin operates freely and keeps the inner post in place when locked.

POWER-RISE

1. Air-Ride Handle - Check to ensure that the Power-Rise activation handle will sufficiently depress the screw to activate the Air-Cylinder. If the unit height does not adjust please refer to the Power-Rise adjustment procedure sheet (MFG #8122041).

2. Check to ensure that there are no contaminants or foreign debris restricting the pedestal's movement. DO NOT lubricate the inner post. Grease or other lubrications can attract dirt and contaminate.

The instructions cover the following products:

MANUAL ADJUSTABLE

Explorer Adjustable
Second Generation Adjustable
Clipper Adjustable
Thread-Lock Adjustable
Springfield Belle
Kingpin Posi-Lock

POWER-RISE

Mainstay Series
Plug-In Adjustable
Plug-In EXT Adjustable
Kingpin Adjustable
Springlock Adjustable
Taper-Lock Adjustable

If parts are required, they may be ordered from the boat manufacturer, or your favorite dealer.