


INSTALLATION INSTRUCTIONS

ROD HOLDERS

1. Determine the location you wish to mount your rod holder. The rod holder can be mounted in the vertical or horizontal configuration. Be sure to leave enough clearance for your rods to safely fit into the selected mounting area.
2. Place 1 rod holder on to the surface you wish to mount to. With a pencil or permanent marker mark the 4 mounting holes using the rod holder as a template.
3. Remove the rod holder from the mounting surface. With a #17 or 11/64" drill bit 4 pilot holes for the mounting screws using the marks made in step 2.
4. Place the rod holder back on the mounting surface and install the 4 mounting screws*. If mounted in the horizontal position the "J" shape of the cut-out in the foam must be towards the floor of the boat as shown in the diagram.
**Due to variances in bolt hole design, mounting hardware is not included. Contact your boat dealer or manufacturer for recommended mounting hardware type. Clearance is provided for a #10 screw.*
5. Determine the location of the second rod holder based on the length of your fishing rods.
6. Follow the same steps used to install the first rod holder. Use a carpenter's square or tape measure to make sure the rod holders are level and square to each other after mounting.

NOTE: For longer fishing rods a third rod holder may be required.

An optional bungee may be used to further secure the fishing rods while stowed. The bungee mounting tabs located at each end and a support groove in the top of the rod holder are present for the purpose.

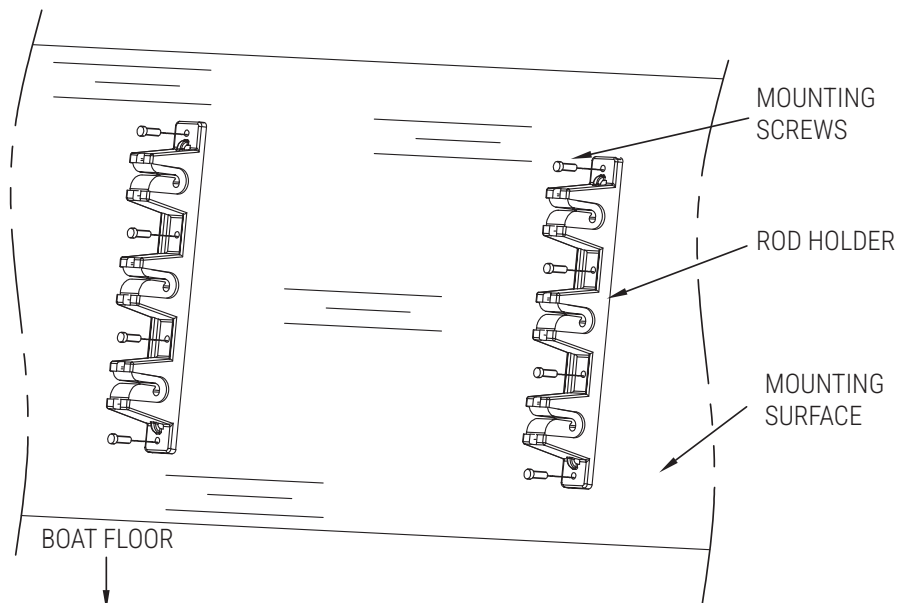

THE MOUNTING DIAGRAM SHOWS THE ROD HOLDER MOUNTED IN THE HORIZONTAL POSITION.